 
 


Adding or Reloading Mitto's on Panels with LCD Display

The Control Panel Contains Live 230v Contacts That Could Cause Severe Harm or Fatal Injury If Touched

- ! Because of the presence of live contacts programming should be restricted to electrically trained and competent personnel
- ! Do not attempt this process in wet weather
- ! Only touch the 3 display control buttons.
- ! If you are in any doubt seek professional help.

The following sequence will add new, or reload existing Mitto transmitters to control panel receivers equipped with an LCD screen and three control buttons.

- Read the entire sequence through before attempting
- The process steps must be completed in rapid succession without pause
- If at any stage the panel displays  the process has failed.
- If you lose your way or become confused, simply leave the panel to time out (About 15 seconds) and start again.
- Do not at any time "CONFIRM" or "OK" 

Mitto 2 & 4 Button Transmitters – "Hidden Button Function"



Old type Mitto




New type Mitto

- Older Mitto's have a hidden button on the rear
- Current Mitto's have no hidden button on the rear

On current Mitto's this function is achieved by pressing the top 2 buttons together


- Check and confirm which model of Mitto you are using before starting


LCD Screen Button Functions:

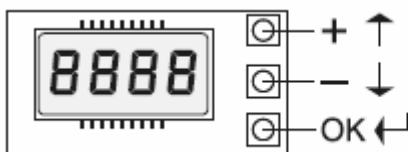

↑ Scroll up
 ↓ Scroll down
 ← Confirm/Switch on display

 
1. Press the OK button twice

= 

 


2. Press the middle twice

 = 




3. Press the OK button once

 
= 




Adding or Reloading Mitto's on Panels with LCD Display

  
4. Press the OK button *once*



= 

5. Press and hold the hidden button(s) on your transmitter -

 
- until the display shows  - release the hidden button(s)

= 

6. Press the button you wish to operate the gate/door with on your new transmitter

=  "01" relates to the number of transmitters installed on the system.

 Subsequent transmitters will result in OK 02, OK 03 etc.

7. The display will now return to 

8. If more transmitters are to be added repeat from stage 4

9. If you are finished leave the panel to time out (About 15 sec.)

Your added transmitter(s) will not work until the receiver times out

Common Problems:

- The panel is in a foreign language

 

Follow the language setting guide below

- The receiver is full – only 64 slots are available

Fit an expansion card – seek technical advice

- Process not followed quickly enough – panel has timed out

Repeat the process

- Inadvertent use of  Instead of 

Repeat the process using Add StArt

- The function you require has been wired into Channel 2

Repeat the process using Add 2ch (Press the middle button once after step 3)

- The function you require has been wired to a remote receiver

Locate and identify the receiver – seek technical advice

- Faulty/damaged transmitter –

 
Diagnose by substitution


This guide only covers simple loading of transmitters, many more functions and options exist, for more details seek professional help from your local BFT installer.

Adding or Reloading Mitto's on Panels with LCD Display


Set the Panel To English


1. Press the OK button twice

= 

 


2. Press the middle button 3 times

 = 




3. Press the OK button once

 = 





4. Press the middle button 3 times

 = 



 5. Press the OK button once

= 

 

Leave the panel to time out (About 15 seconds)